Reorder #533470

TO OPEN


- The factory preset combination is 0-0-0
- Turn the code wheels so that 0-0-0 aligns with the code mark
- Pull the shackle out

TO SET NEW CODE

- The lock must be in the open position to set a new code
- Turn the shackle 180° from lock opening (Fig. B)
- Firmly press and hold shackle down (Fig. C)
- Turn the code wheels to set your new combination
- When your new combination numbers are aligned with the code mark, pull shackle back up

TO LOCK

- Align the shackle with the lock opening and depress
- Hold down shackle and scramble the code wheels

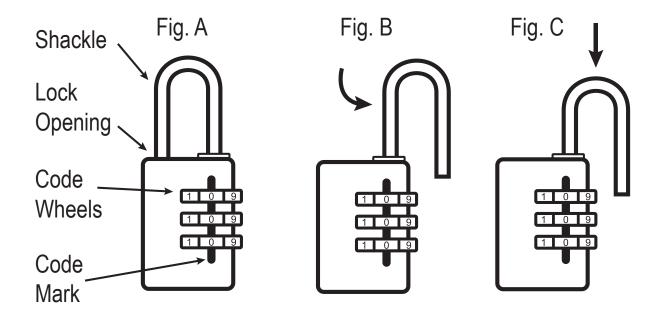

www.hopkinsmedicalproducts.com 1-800-835-1995

