BOWMAN[®] Dispensers Organize-Contain-Comply[®]

BD216–0012 Cover Your Cough Compliance Kit

MADE USA

Product Description:

- Kit Includes:
 - RS005-0212 Respiratory Hygiene Station Locking
 - Holds two boxes of face masks, one two boxes of facial tissues or one box of gloves, and one hand sanitizer dispenser
 - Quartz Beige ABS Plastic
 - MP-075 Sign Holder Horizontal
 - Holds 11" x 8.5" signage
 - Clear PETG Plastic
- · Assembly hardware included

Primary Area for Product Usage:

- · All ports of entry
- · Anywhere respiratory hygiene products are needed

Dispenses:

- Left: Dispensing unit no larger than 8.35"W x 14.75"H x 5.00"D (21.2 cm x 37.5 cm x 12.7 cm)
- [Note: Refer to automatic dispensing specifications on detection distance requirements.]
- Middle: Box(es) no larger than 7.75"W x 5.00"H x 4.75"D (19.7 cm x 12.7 cm x 12.1 cm)
- Right: Box(es) no larger than 5.50"W x 10.00"H x 4.75"D (13.7 cm x 25.4 cm x 12.2 cm)

Product Specifications (overall assembled dimensions):

- 22.25"W x 22.40"H x 5.00"D (56.5 cm x 56.9 cm x 12.7 cm)
- 5.0 lbs (2.3 kg) approximated


Package Specifications:

- Package Quantity: 1 complete kit per case
- 24"L x 16"W x 6"H (61.0 cm x 40.6 cm x 15.2 cm)
- 7.0 lbs (3.2 kg) approximated



Sanitizer, face masks, and tissues not included

Mounting Specifications:

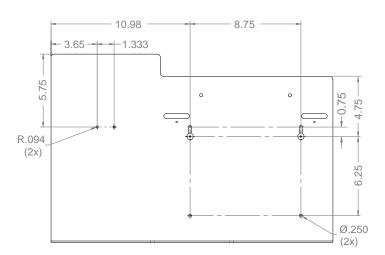







BD216-0012 Cover Your Cough Compliance Kit Assembly Instructions

Installation

Always mount dispensers securely prior to loading with product.

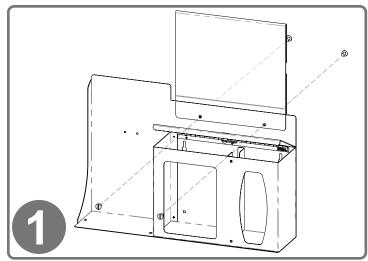


To mount the MP-075 Sign Holder, align the holes of the holder with the holes of the dispenser. With a flathead screwdriver, attach using (2x) barrel screws included with sign holder.

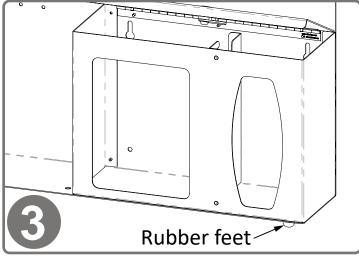


For placing on counter, attach (4x) self-adhesive rubber feet at each of the bottom corners (included).

Parts included:

- **Respiratory Hygiene Station**
- Sign Holder

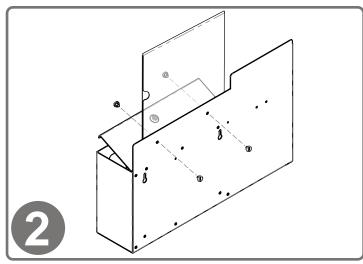

Thumb access to signage goes toward back of dispenser.

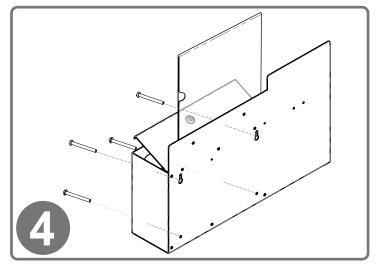

Dispenser can also be mounted securely to a wall through keyholes and screw holes in back with screws approved and supplied by building maintenance. All four mounting holes provided must be used.

- Hardware
 - (4x) rubber feet
 - (2x) barrel screws

Tools Required:

Flathead Screwdriver •

BD216-0012 - Installation Information subject to change without notice. Dimensions are approximate. (Not to scale)

BOWMAN Dispensers 800.962.4660 • www.BowmanDispensers.com

BOWMAN[®] Dispensers Organize-Contain-Comply[®]

BD216–0012 Cover Your Cough Compliance Kit Characteristics & Care

RS005-0212 **MP-075 ABS Plastic PETG Plastic Designed for Long-Term, Heavy-Duty Applications Designed for Long-Term, Heavy-Duty Applications** The combination of copolymers (Acrylonitrile, Copolyester resin is designed for heavy-duty Butadiene, and Styrene) gives ABS an excellent applications, and is used by BOWMAN® Dispensers. combination of strength, rigidity, and toughness. We never use acrylic in our products. ABS is chemical and stress-crack resistant. It is Copolyester (PETG) is typically 15-20 times tougher than general purpose acrylic. PETG is made to tough, dimensionally stable, and will hold up to withstand handling and reduce losses due to long-term use. It possesses high strength and performance characteristics at a reasonable cost. breakage. PETG resists a variety of chemicals and commonly used cleaning agents. It is tough and durable (not brittle), providing years of trouble-free functionality and long life. Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. It complies with FDA regulations for food contact.

Gare and Gleanin

Use mild soap and water to clean. Petroleum-based oils, solvents, and paints should not be used.

Standard hospital cleaning supplies can be used.

Most cleaning chemicals do not weaken the surface or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild soap.