



MADE  
IN THE **USA**

### Companion Products (each sold separately):

- GL100-0212: Glove Box Dispenser - Single (shown below)



### Product Description:

- Glove Box Dispenser - Triple
- Holds three boxes of gloves
- Three-way keyholes for vertical or horizontal wall mounting
- Quartz Beige ABS Plastic

### Primary Area for Product Usage:

- Anywhere gloves are needed


### Dispenses:

- Box(es) no larger than 5.25"W x 10.00"H x 3.75"D (13.3 cm x 25.4 cm x 9.5 cm)
- Box(es) no smaller than 4.50"W x 8.50"H x 2.50"D (11.4 cm x 21.6 cm x 6.4 cm)

### Product Specifications (overall external dimensions):

- 17.08"W x 10.11"H x 4.22"D (43.4 cm x 25.7 cm x 10.7 cm)
- 1.40 lbs (0.6 kg) - approximated

### Mounting Specifications:

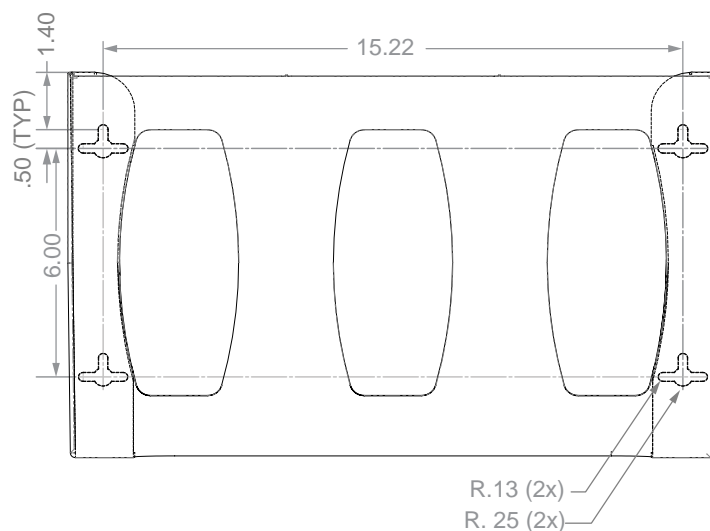

### Package Specifications:


- Package Quantity: 6 per case
  - 21"L x 14"W x 10"H (53.3 cm x 35.6 cm x 25.4 cm)
  - 10.0 lbs (4.5 kg) - approximated
- Package Quantity: 1 per case
  - 20"L x 12"W x 8"H (50.8 cm x 30.5 cm x 20.3 cm)
  - 3.0 lbs (1.4 kg) - approximated



## Installation


Always mount dispensers securely *prior* to loading with product.

- Dividers hold each box for ease of loading and removing even when mounted horizontal.

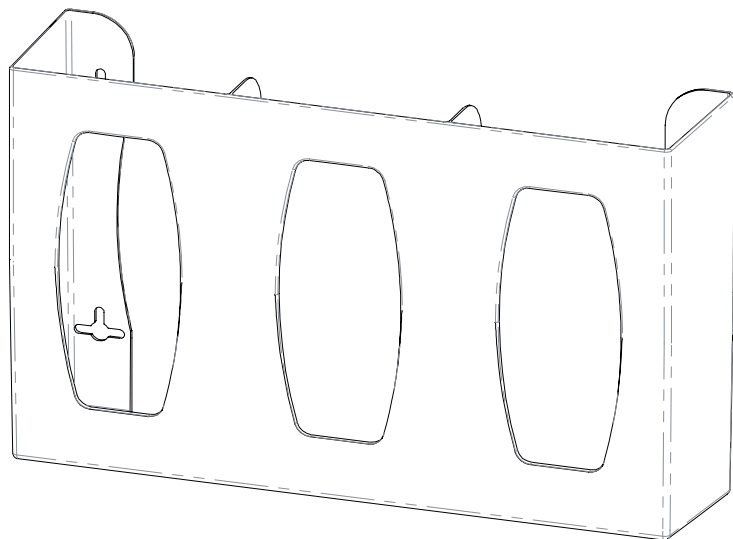

1

- Mount securely to a wall with screws approved and supplied by building maintenance.

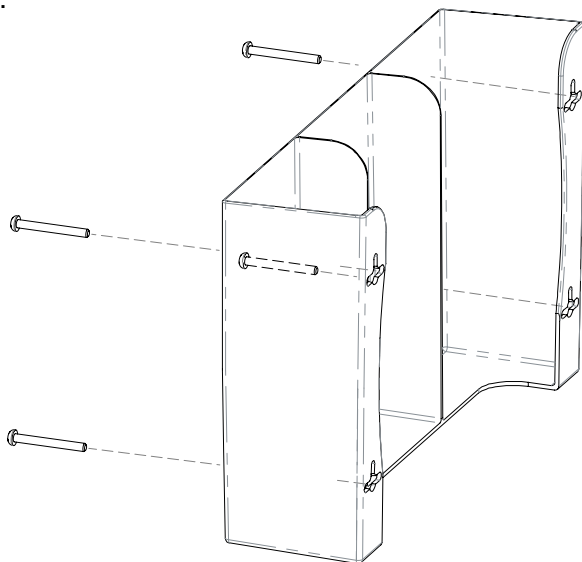

2

### Parts included:

- Dispenser

### Tools Required:

- No tools required to assemble dispenser

## Care and Construction

ABS Plastic

### Material Characteristics

### Designed for Long-Term Heavy-Duty Applications

The combination of copolymers (Acrylonitrile, Butadiene, and Styrene) gives ABS an excellent combination of strength, rigidity, and toughness.

ABS is chemical and stress-crack resistant. It is tough, dimensionally stable, and will hold up to long-term use. It possesses high strength and performance characteristics at a reasonable cost.

### Care and Cleaning

Use mild soap and water to clean. Petroleum-based oils, solvents, and paints should not be used.

Standard hospital cleaning supplies can be used.