




Related Products (each sold separately):

- GP-072: Glove Box Dispenser Double Narrow (shown below)
- GP-073: Glove Box Dispenser Triple Narrow

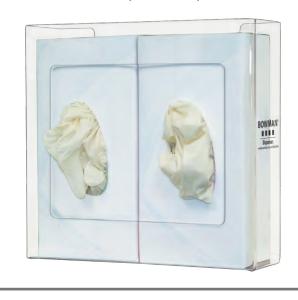

Product Description:

- Glove Box Dispenser Single Narrow
- · Holds one thin box of gloves
- Three-way keyholes for vertical or horizontal mounting
- Clear PETG Plastic

Primary Area for Product Usage:

• Anywhere gloves are needed


Dispenses:

- Box(es) no larger than 5.51"W x 10.00"H x 2.75"D (14.0 cm x 25.4 cm x 7.0 cm)
- Box(es) no smaller than 4.50"W x 8.00"H x 1.50"D (11.4 cm x 20.3 cm x 3.8 cm)

Product Specifications (overall external dimensions):

- 5.70"W x 9.85"H x 2.95"D (14.5 cm x 25.0 cm x 7.5 cm)
- 0.7 lbs (0.3 kg) approximated

Mounting Specifications:

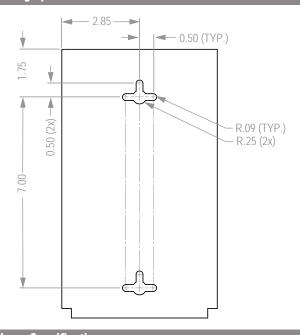


Package Specifications:


- Package Quantity: 12 per case
 - 16"W x 12"H x 12"D (40.6 cm x 30.5 cm x 30.5 cm)
 - 10.0 lbs (4.5 kg) approximated
- Package Quantity: 1 per case
 - 12"W x 10"H x 9"D (30.5 cm x 25.4 cm x 22.9 cm)
 - 2.0 lbs (0.9 kg) approximated



Installation

Always mount dispensers securely prior to loading with product.

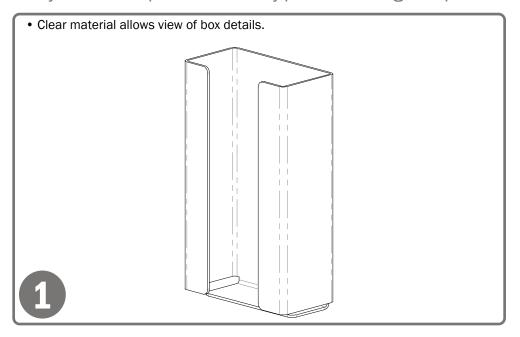

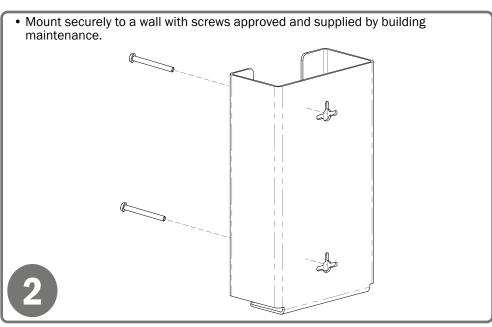

Parts included:

Dispenser

Tools Required:

· No tools required to assemble dispenser

Care and Construction PETG Plastic

Material Characteristics

Designed for Long-Term, Heavy-Duty Applications

Copolyester resin is designed for heavy-duty applications, and is used by BOWMAN® Dispensers. We never use acrylic in our products.

Copolyester (PETG) is typically 15-20 times tougher than general purpose acrylic. PETG is made to withstand handling and reduce losses due to breakage.

PETG resists a variety of chemicals and commonly used cleaning agents. It is tough and durable (not brittle), providing years of trouble-free functionality and long life.

Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. It complies with FDA regulations for food contact.

Care and Cleaning

Most cleaning chemicals do not weaken the surface or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild soap.